

## PORSCHE Function List V1.0(2008-06-10)

System	control unit versions	Read fault	Final control	basic setting	Erase fault	End output	Code control unit	Read measuring value block	Read individual measuring value	Adapt -ation	Login	Write VIN	Coding 2	Authoris -ation
01-Engine	√	√	√		√	√		√	√					
02-Auto Trans	√	√	√		√	√		√	√					